

OEL Disassembly Drawing

B710/B720/B730 Option Tray










Revision 1

Parts List

Caution for use of parts list

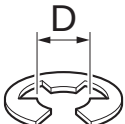- ◆ The figures indicating the illustrations are the item No. in the list and present correspondence between the illustrations and parts.
- ◆ The notation of PL "X.Y.Z" is composed of the plate (PL), item "X.Y", and parts "Z".
- ◆ The alphabet characters in the illustrations represent screws and clips as follows:

Type	Shape	PL No.	Size	PARTS No.
Screw for plastic Silver, tapping		S1	M3X6mm	153W27678
		S2	M3X8mm	153W27878
		S3	M3X30mm	826E11030
		S4	M3X29mm	826E29000
		S5	M3X22mm	826E13551
Screw for plastic Silver, with flange, tapping		S6	M3X8mm	826E13590
Screw for metal sheet Silver		S7	M3X6mm	026E14990
		S8	M3X6mm	026E16550
		S9	M3X6mm	826E12480
		S10	M3X10mm	826E22420
Screw for metal sheet Silver, with flange		S11	M3X8mm	026E87840
		S12	M3X8mm	826E22380
Screw for metal sheet Silver, with lock washer		S13	M3X8mm	112W27898
		S14	M3X10mm	112W28098
Screw for metal sheet Silver, with an external tooth washer		S15	M4X5mm	826E25640
Ring-E		E1	D3	354W21278
		E2	D4	354W24278

- ◆ "t" mark in the illustrations are attached to items indicating assembly parts in the illustrations.
- ◆ Encircled alphabetical figures in the illustrations indicate interrupted leader lines. Same characters in the illustrations represent lines to be connected.
- ◆ The mark "(with 2-5)" attached to assembly parts on the illustrations and lists represents that the items "2, 3, 4, and 5" of that plate are contained and the mark "(with 2-5, PL6.1.1)" represent that the item "2, 3, 4, and 5" of that plate and the item "1" of the plate "6.1" are contained.
- ◆ The mark "[Same PLX.Y.Z]" attached to parts in the illustrations and lists represents that the parts is the same as the parts of the item "Z" of the plate "X.Y".

- ◆ The mark "H" attached to the item in the list represents "recommended spare parts" which can be usually supplied. (Supply of other parts shall be examined separately.)
- ◆ The mark "[" attached to parts in the list represents "Note" or "Reference" about that parts is contained in the same page.
- ◆ "HIGH ASSY" in the list represent the high level assembly parts containing that parts.


NOTE

For spare parts, refer to the "Spare parts list" which is issued separately.

NOTE

It should be noted that configuration of parts may be different or some parts are not used depending on specifications of OEM.

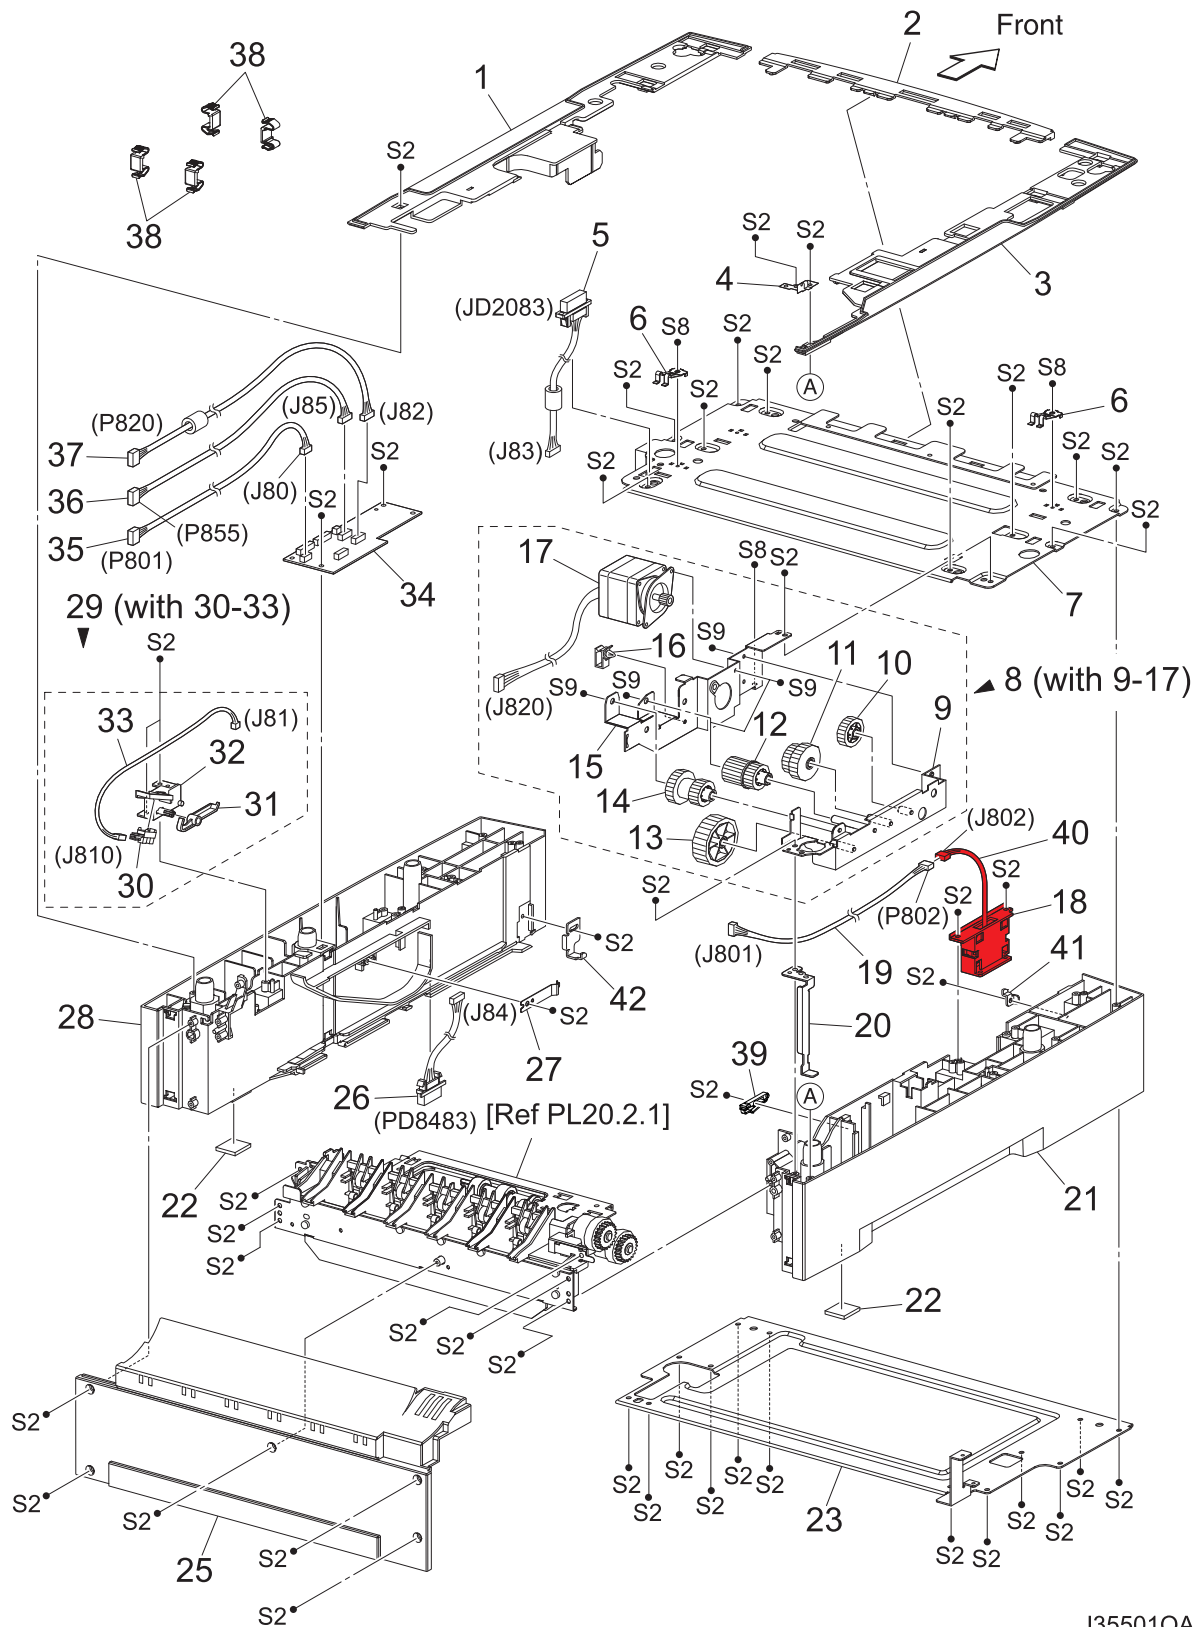PL20.1 Option 550 Paper Feeder (1/2) [Illustration]




J355010A

PL20.1 Option 550 Paper Feeder (1/2) [List]

Item	Parts name
1	COVER RIGHT PLATE
2	COVER FRONT
3	COVER LEFT PLATE
4	EARTH PLATE
5	HARNESS ASSY FDR2 (J83-JD2083)
6	SPRING EARTH TOP
7	FRAME TOP ASSY
8	DRIVE ASSY OPT FDR 45 (with 9-17)
9	BRACKET ASSY FDR DRV 45
10	GEAR OPT FDR2
11	GEAR OPT FDR3
12	GEAR OPT FDR4
13	GEAR OPT FDR5
14	GEAR OPT FDR6
15	PLATE OPT FDR DRV 45
16	CLAMP-5V0
17	MOTOR ASSY OPT FDR 45 (J820)
18	OPT ASSY SIZE (P800)
19	HARNESS ASSY SIZE FDR1 (P802-J801)
20	PLATE EARTH 550
21	FRAME CVR L550
22	FOOT
23	FRAME BASE FRONT
24	- -
25	COVER RE550
26	HARNESS ASSY FDR5 (J84-PD8483)
27	PLATE CST LOCK
28	FRAME CVR R550
29	HLD LOW PAPER ASSY (with 30-33)
30	SENSOR LOW PAPER (P810)
31	ACTUATOR LOW PAPER
32	HOLDER LOW PAPER
33	HARNESS LOW PAPER (J81-J810)
34	PWBA FEEDER 550
35	HARNESS ASSY SIZE FDR2 (J80-P801)
36	HARNESS ASSY CLSNR2 (J85-P855)
37	HARNESS ASSY FDR MOT (J82-P820)
38	JOINT FEEDER
39	LOCK CST L
40	HARNESS ASSY SIZE FDR3 (J802-J800)
41	STOPPER TRAY L
42	STOPPER TRAY R

PL20.2 Option 550 Paper Feeder (2/2) [Illustration]

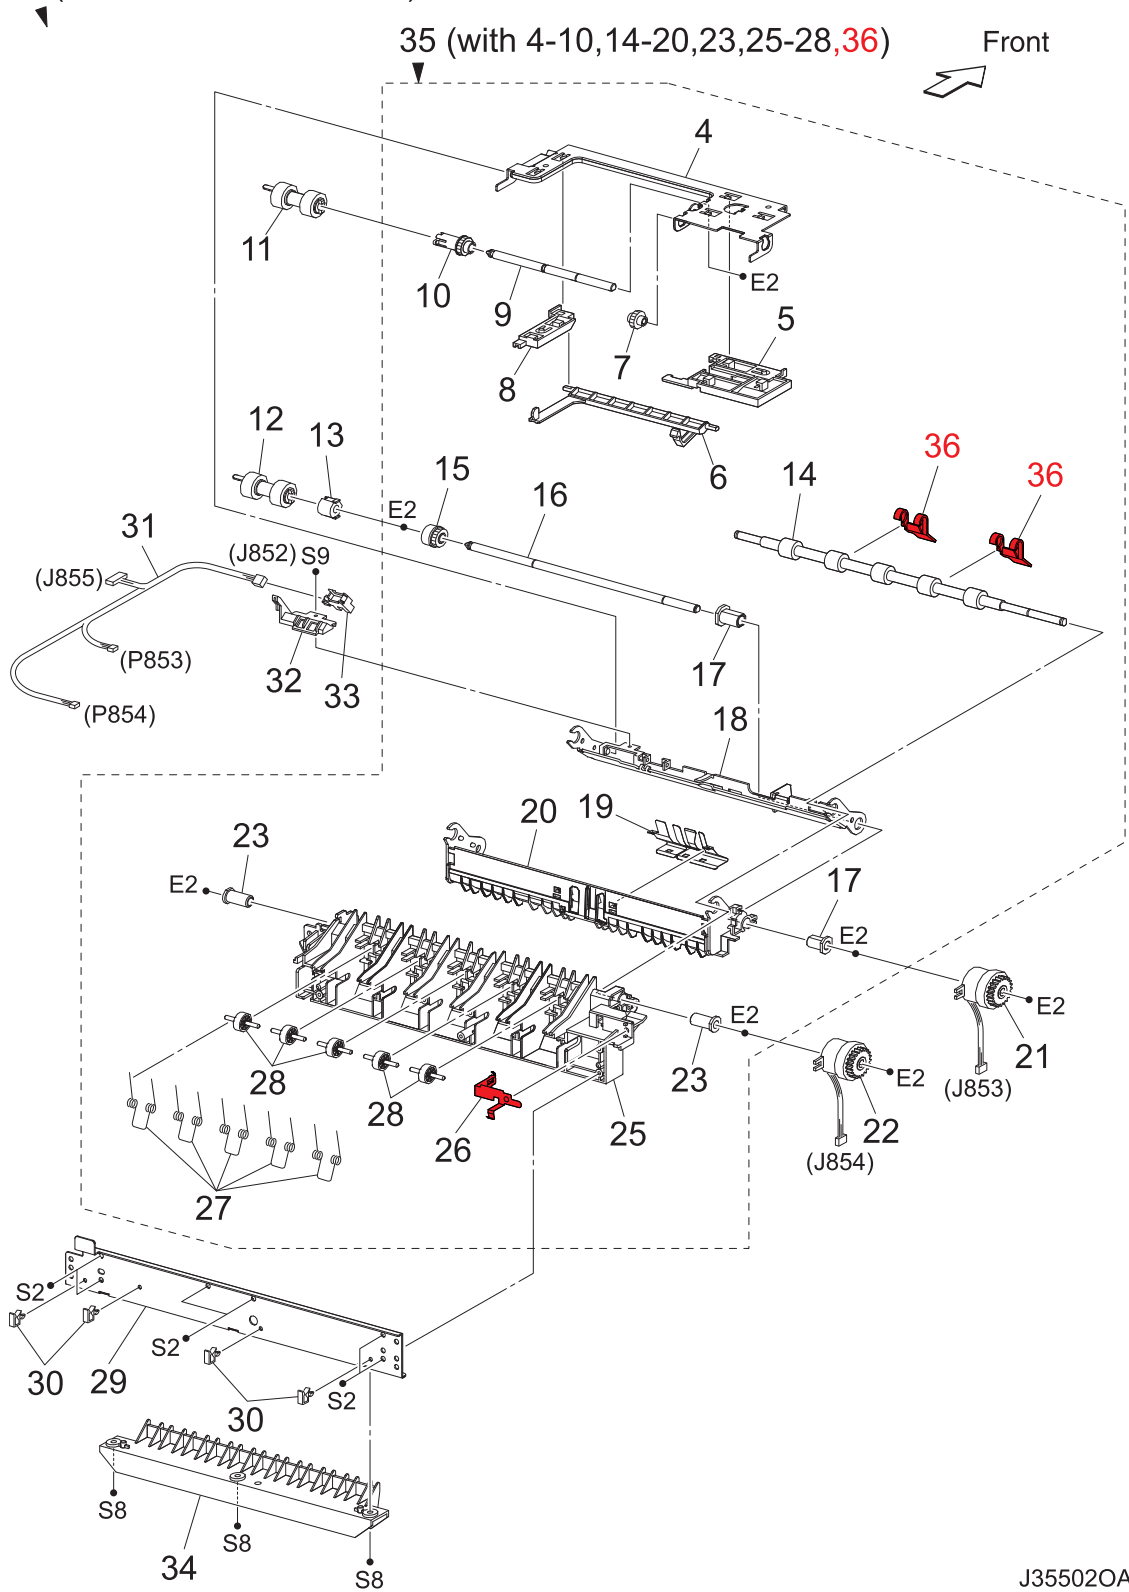1 (with 11-13,21,22,29-35)



J355020A


PL20.2 Option 550 Paper Feeder (2/2) [List]

Item	Parts name
1	550 FEEDER OPTION (with 11-13,21,22,29-35)
2	--
3	--
4	SUPPORT NUDGER
5	HOLDER LEFT
6	ACTUATOR NO PAPER
7	GEAR IDLER NUDGER
8	HOLDER RIGHT
9	SHAFT NUDGER
10	GEAR NUDGER
11	ROLL ASSY NUDGER *1
12	ROLL ASSY FEED *1
13	CLUTCH ONEWAY FEED
14	ROLL ASSY TURN
15	CLUTCH ONEWAY NUDGER
16	SHAFT FEED
17	BEARING NUDGER
18	CHUTE TOP ASSY
19	COVER ACTUATOR
20	CHUTE BTM ASSY
21	CLUTCH ASSY PH (J853)
22	CLUTCH PR-REGI (J854)
23	BEARING FEEDER
24	--
25	CHUTE OUT
26	SPRING EARTH
27	SPRING PINCH TURN
28	ROLL PINCH TURN
29	PLATE TIE
30	CLAMP-5V0
31	HARNESS ASSY CLSNR1 (J855-J852,P853,P854)
32	HOLDER NO PAPER SENSOR
33	SENSOR NO PAPER (P852)
34	CHUTE 550LOWER
35	FDR3 AS SUB 550 A4 (with 4-10,14-20,23,25-28,36)
36	GUARD TURN ROLL

*1: Periodical Replacement parts (per 200k print)

3sets [1] of PL20.2.11,12,PL20.3.2

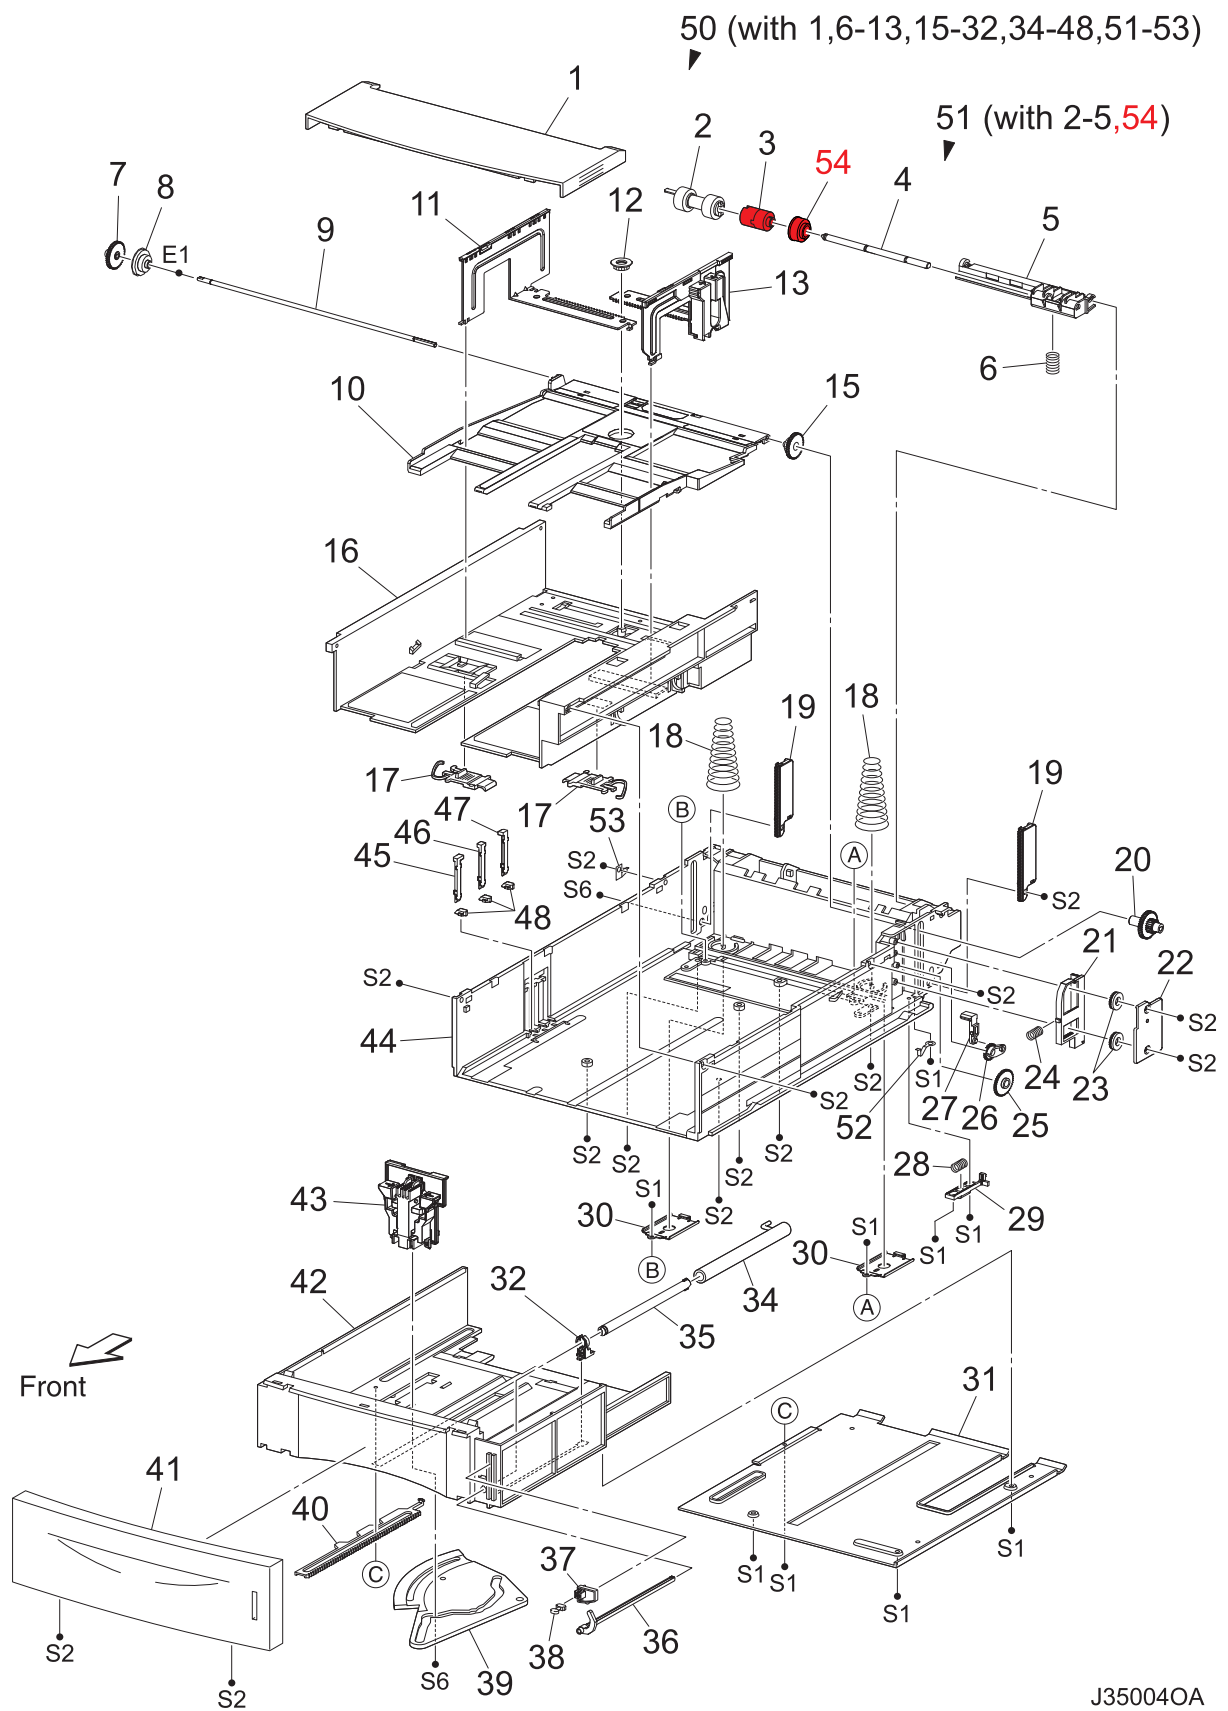PL20.3 Option 550 Paper Cassette [Illustration]



PL20.3 Option 550 Paper Cassette [List]

Item	Parts name
1	COVER CST
2	ROLL ASSY RETARD *1
3	FRICTION CLUTCH
4	SHAFT RETARD
5	HOLDER RETARD
6	SPRING RETARD
7	GEAR PB L
8	GEAR BTM DMP ONEWAY
9	SHAFT PB
10	PLATE ASSY BTM
11	GUIDE ASSY SD L550
12	GEAR PINION
13	GUIDE ASSY SD R550
14	--
15	GEAR BTM LOCK ONEWAY
16	HOUSING TOP 550
17	LOCK EXTENSION
18	SPRING BTM UP 550
19	PLATE GEAR LOCK 550
20	GEAR PB R
21	RACK BTM LOCK 550
22	COVER BTM UP 550
23	GEAR BTM LOCK PINION
24	SPRING BTM LOCK
25	GEAR BTM LOCK
26	GEAR LEVER LOCK
27	LEVER BTM LOCK
28	SPRING STOPPER GEAR
29	STOPPER GEAR
30	PLATE SUPPORT
31	COVER EXTENSION
32	SUPPORT GUIDE IND
33	--
34	GUIDE INDICATOR 1
35	GUIDE INDICATOR 2
36	GUIDE INDICATOR 3
37	LOW INDICATOR
38	LOW IND FRONT
39	GEAR SECTOR
40	RACK SIZE
41	HANDLE EXTENSION 550
42	HOUSING EXTENSION 550
43	GUIDE ASSY END 550
44	HOUSING BASE 550
45	LINK SW SIZE1-550
46	LINK SW SIZE2-550
47	LINK SW SIZE3-550
48	LINK SW SIZE LOW
49	--
50	550 PAPER CASSETTE (with 1,6-13,15-32,34-48,51-53)
51	HOLDER ASSY RETARD (with 2-5,54)
52	STOPPER BASE R
53	STOPPER BASE L
54	COLLAR

*1: Periodical Replacement parts (per 200k print)
3sets [1] of PL20.2.11,12,PL20.3.2